




Setup Guide T9560 EZ

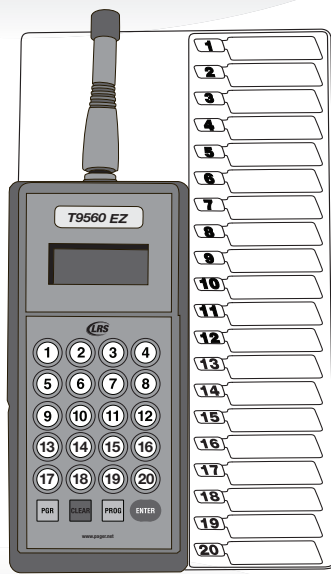


Items Included

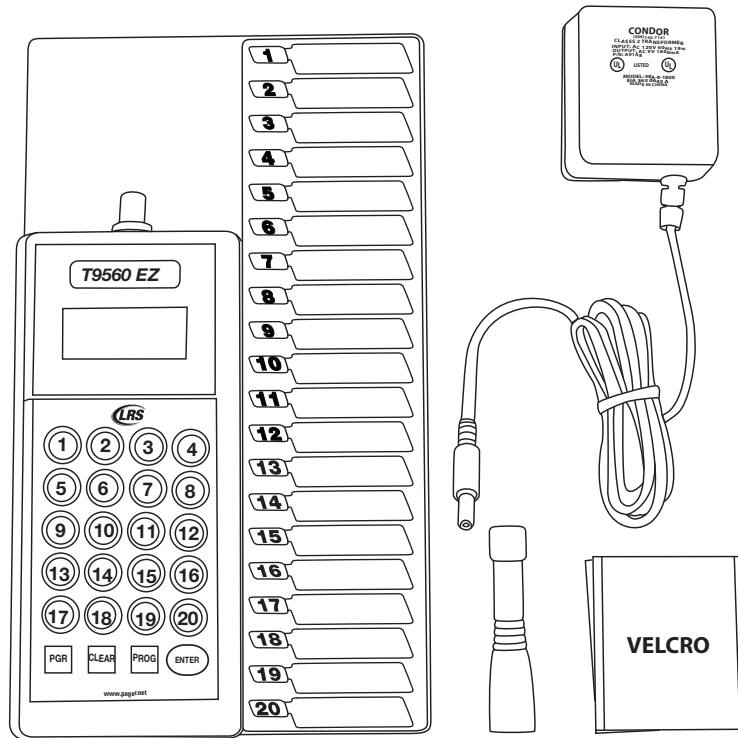


1

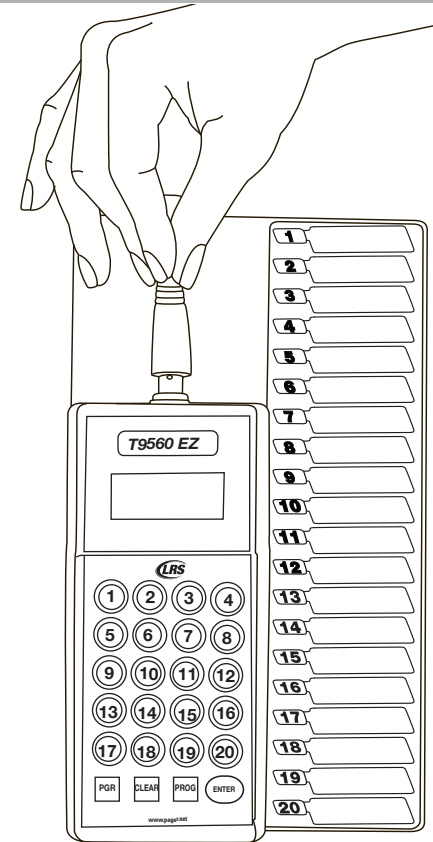


2

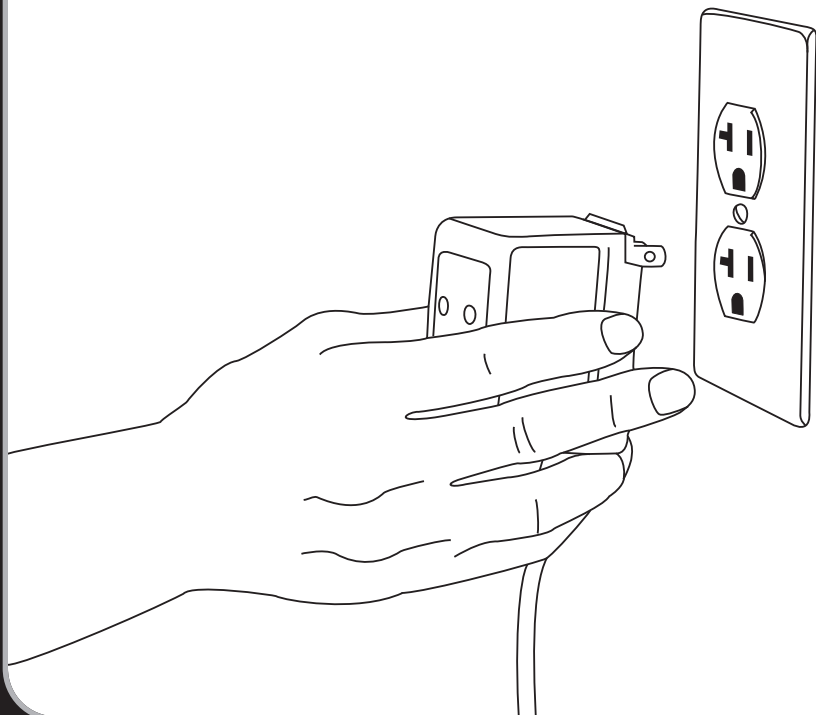


3

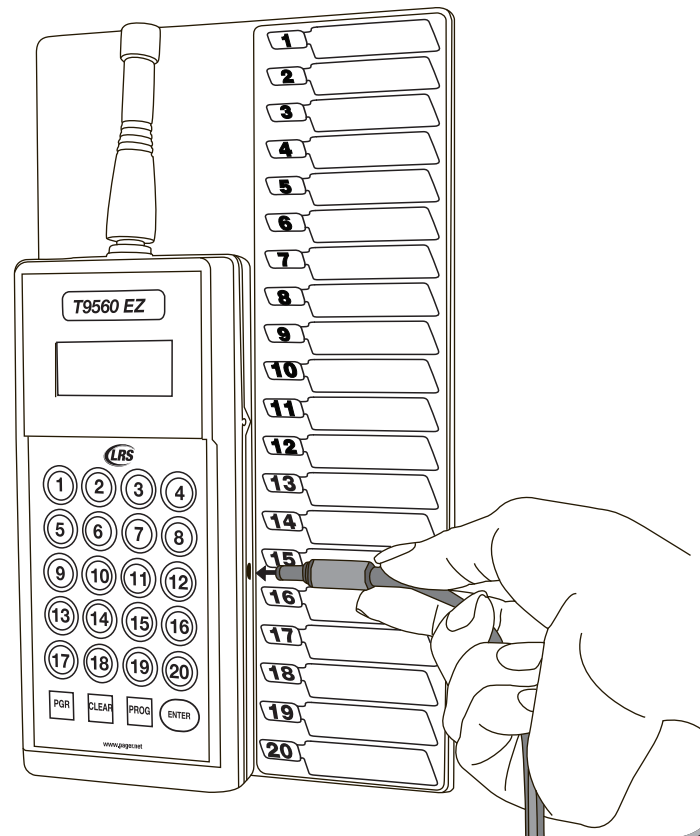

4

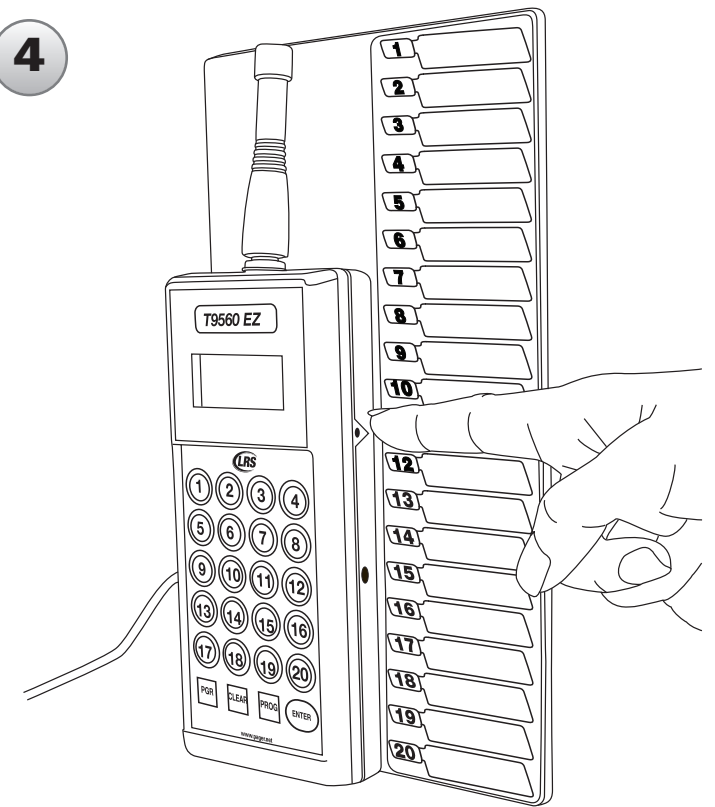

5

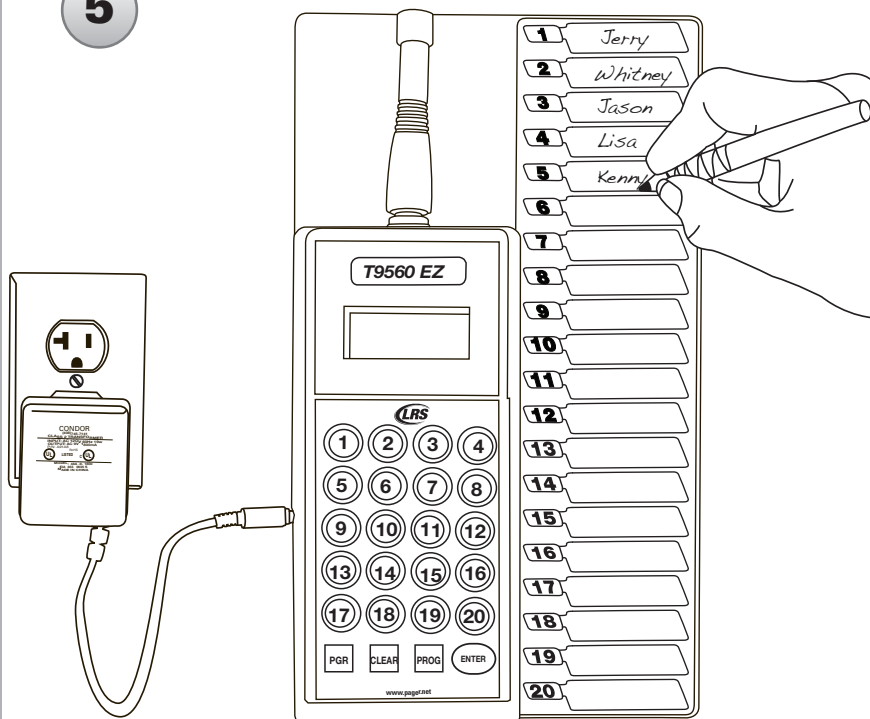

See back for basic operation instructions. For complete instructions, go to www.pager.net.



Long Range Systems
4550 Excel Parkway, Suite 200
Addison, TX 75001
www.pager.net • 800.437.4996

T9560EZ BASIC OPERATIONS GUIDE


Note: The T9560 EZ factory defaults are the most commonly used settings (Restaurant ID = 0, Vibration Mode = 1).

PAGING

For pagers numbered 1 – 20:

1. Press the pager number
2. The unit will automatically send a page

For pagers numbered 21 – 799:

1. Press 
2. Press the pager number on the keypad

PAGE ALL

To use the All Page:








 


1. Press 
2. Press  -  - 

MAINTENANCE FUNCTIONS

Range Test

The Range Test feature is used to broadcast a continuous signal. This will allow for testing within your location regarding range for your pagers to receive a page from the T9560.

To turn **ON** the Range Test:

- Press  -  -  -  - 
- or  -  -  -  - 

When the range test is active, the LCD will display an 8 moving across screen. Then the red LED will transmit once every 10 seconds.

Take a couple of pagers and gradually move further away from the transmitter until the pager stops vibrating. This will indicate the range of your T9560EZ.

To turn **OFF** the Range Test:

- Press 

Low Battery Alert

When the transmitter's battery is low, the LCD will display "LoBat".

OPERATION MODE

To turn on LRS Guest:

- Press  -  -  -  - 

To turn on Alphanumeric (POCSAG) Staff:

- Press  -  -  -  - 

To turn on Orion Pager:

- Press  -  -  -  - 

To turn on SP4 - Star Staff:

- Press  -  -  -  - 

SYSTEM SETTINGS

Set Restaurant ID

The Restaurant ID **factory default** setting is **0**. Your system -may not be shipped with the factory default setting ID = 0. Contact LRS at 800.437.4996, to verify your Restaurant ID.

To change the ID:

- Press  -  -  - x -  (x = sys ID from 1 to 49)

Factory Reset



To reset the transmitter factory defaults:

- Press  -  -  -  - 


PAGER PROGRAMMING

The T9560 EZ can program any LRS Pager type. The transmitter's current mode of operation must match the desired pager type to program.



 
 

To program an SP4, coaster, or paddle pager:

1. Remove the pager from the charging base
2. Allow the pager to complete the vibration and flashing sequence
3. Press  then the corresponding pager # and press 
4. The red LED in the top right corner of the transmitter will light up once
5. The pager will glow once cycle to indicate it received the programming

To program an Alpha Pager or Orion Pager:

1. Remove the battery from the pager
2. Re-insert the battery into the pager
3. On the keypad, press the corresponding pager # and press 
4. The red LED on the top right corner of the transmitter will light up three times
5. The pager will then beep three times to indicate it received the programming

- b. The pager will beep an additional time for each group programmed.

4. Turn OFF Group Paging, press  -  -  -  - 
5. Repeat Steps 1-4 for each Group to be setup (be sure to turn Group Paging ON for each Group and then OFF after each Group is setup and individual pagers are programmed for that Group)
6. When all Groups are setup and programmed, be sure that Group Paging is turned OFF



 
 





Group Paging and Programming

The T9560 EZ has the ability to program groups into the LRS Alphanumeric Staff and Orion Pagers only. Up to 5 groups can be programmed into the transmitter and pager

To turn **ON** Group Paging, press  -  -  -  - 

To turn **OFF** Group Paging, press  -  -  -  - 

When Group Paging is enabled, select up to 5 Group Numbers to set and define in the transmitter. Please follow these steps to setup Groups:

1. Turn ON Group Paging, press  -  -  -  - 
2. To set Group Number, press  -  -  - # -  (# is a number from 1 to 9)
3. Program each individual pager that will belong to this Group (see Pager Programming section)
 - a. While the pager is programmed, the red LED on the transmitter will blink one additional time for each group to program.

To download a full instruction manual visit www.pager.net/support



800.437.4996
www.pager.net
XU-0128 051413